

Revolutionary Design ~ Proven Technology

www.PresbyEnvironmental.com 800-473-5298

✓ EnviroFin™ Checklist

✓	1 Fin Distribution Unit (FDU) 2 Halves
✓	8 Treatment Fins (2 Sets of 4)
✓	4 Plastic Zip Ties Plus 1 Extra Included

✓	18 Self Tapping Screws
✓	1 Cover
✓	Silicone Caulking

** Not Included In Package*



*** Schedule 40 Sanitary 'T'**



Quick Assembly Guide

Please Refer to Design Manual for Detailed Installation Instructions


Assemble the Fin Distribution Unit (FDU)

A. Assemble Bottom with 4 Screws

B. Screw Sides Together

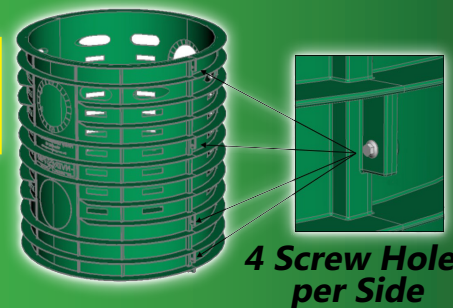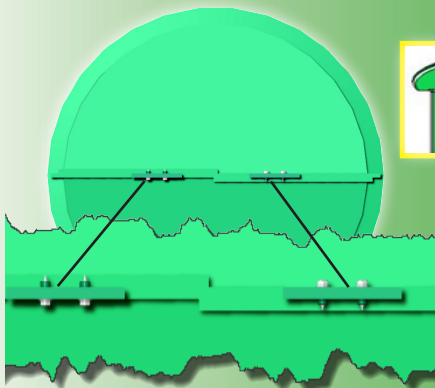


**Drill Equalization Hole
(if Needed)**

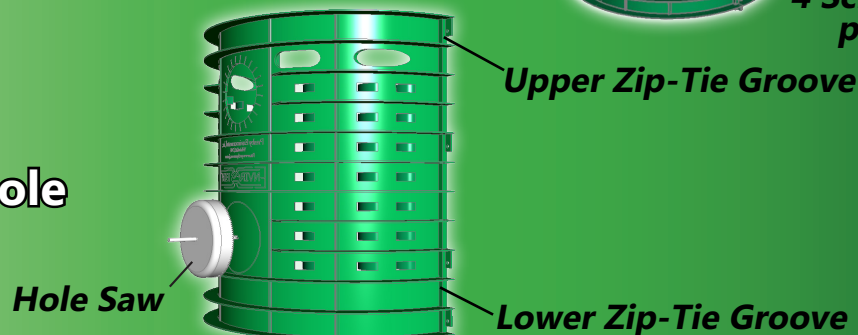

Attach Treatment Fins to FDU

C. Stack each set of Treatment Fins in horizontal position using 'U' Brackets (shown below), grade stakes, or similar (~20" between sets of Treatment Fins)


Use 2"x4" to construct 'U' Brackets

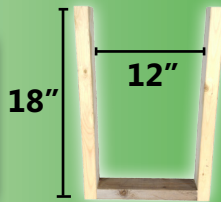

D. Thread Zip-Ties through Upper and Lower Zip-Tie Holes on Treatment Fins
Connect each set of Zip-Ties on one side creating a pocket for the FDU with fabric overlapping- Make sure Zip-Ties meet on mating end



E. Place FDU on the overlapping fabric
All Treatment Fin Air Ducts need to be oriented toward the top side of FDU

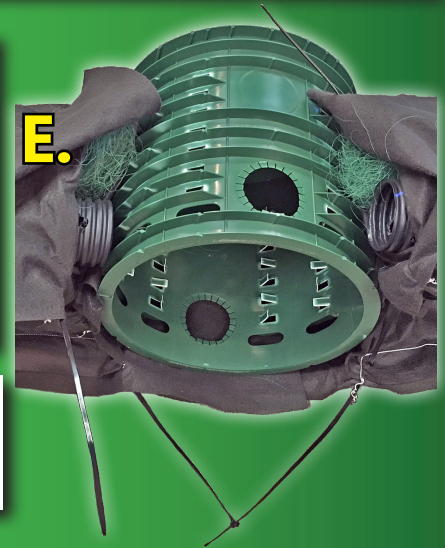


Be sure Air Duct Pipes are not blocked by excess fabric



F. Overlap remaining fabric to cover the FDU
Connect Zip-Ties to Upper and Lower Zip-Tie Grooves to secure Treatment Fins to FDU
Tighten Zip-Ties incrementally to secure fabric in upper and lower grooves- Flipping unit may allow for easier access to Zip-Tie groove

Assembly Complete

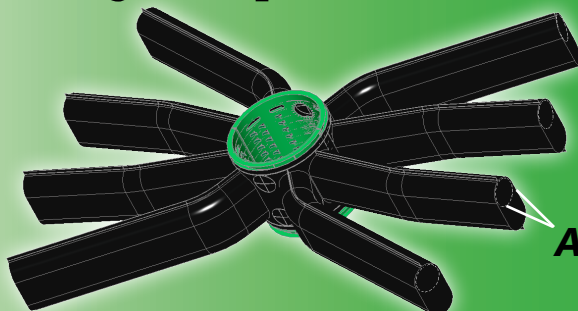

Confirm Air Duct Pipe is Oriented on Top of Treatment Fins

Air Duct Pipe